

Valid from firmware version: V1.1

CHANNEL	VALUE	FUNCTION
17ch		
1	000-255	PAN 0°→540°
2	000-255	PAN FINE
3	000-255	TILT 0°→270°
4	000-255	TILT FINE
5	000-255	PAN/TILT SPEED Fast to Slow
6		COLOR WHEEL
	000-007	Open
	008-014	Color 1
	015-021	Color 2
	022-028	Color 3
	029-035	Color 4
	036-042	Color 5
	043-049	Color 6
	050-056	Color 7
	057-063	Color 8
	64	Open
	65	Open + Color 1
	66	Color 1
	67	Color 1 + Color 2
	68	Color 2
	69	Color 2 + Color 3
	70	Color 3
	71	Color 3 + Color 4
	72	Color 4
	73	Color 4 + Color 5
	74	Color 5
	75	Color 5 + Color 6
	76	Color 6
	77	Color 6 + Color 7
	78	Color 7
	79	Color 7 + Color 8
	80	Color 8
	81	Color 8 + Open
	82-127	Open
	128-189	Clockwise Rotation, Fast to Slow

	190-193 194-255	Stop Counter-Clockwise Rotation, Slow to Fast
7	000-007 008-016 017-025 026-034 035-043 044-052 053-063 064-073 074-083 084-093 094-103 104-113 114-127 128-189 190-193 194-255	GOBO WHEEL Open Gobo 1 Gobo 2 Gobo 3 Gobo 4 Gobo 5 Gobo 6 Gobo 1 Shaking, Slow to Fast Gobo 2 Shaking, Slow to Fast Gobo 3 Shaking, Slow to Fast Gobo 4 Shaking, Slow to Fast Gobo 5 Shaking, Slow to Fast Gobo 6 Shaking, Slow to Fast Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
8	000-127 128-189 190-193 194-255	GOBO WHEEL ROTATION Index 0°→360° Clockwise Rotation, Fast to Slow Stop Counter-Clockwise Rotation, Slow to Fast
9	000-007 008-255	PRISM (3-facet circular prism) Close Open
10	000-127 128-189 190-193 194-255	R-PRISM Index 0°→360° Counter-Clockwise Rotation, Fast to Slow Stop Clockwise Rotation, Slow to Fast
11	000-007 008-128 129-255	ANGLE/FROST Null Angle Frost
12	000-255	FOCUS 0%→100%
13	000-255	FOCUS FINE
14	000-007 008-015 016-131	STROBE Close Open Strobe from Slow to Fast

	132-139 140-181 182-189 190-231 232-239 240-247 248-255	Open Fast Open Slow Close from Slow to Fast Open Slow Open Fast Close from Slow to Fast Sound-activated Strobe Random Strobe from Slow to Fast Open
15	000-255	DIMMER 0%→100%
16	000-255	DIMMER FINE
17	000-029 030-039 040-049 050-059 060-069 070-079 080-089 090-099 100-109 110-119 120-122 123 124 125 126 127 128 129 130 131 132 133 134 135 136 137 138-139 140-149 150-159 160-199 200-209	SPECIAL FUNCTION (To activate following functions, stop in DMX value for at least 3 seconds.) Null Dimmer Curve Linear Dimmer Curve Square Law Dimmer Curve Inv SQ Law Dimmer Curve S Fan Mode: Standard Fan Mode: Quiet Null LED Frequency Setting Enable LED Frequency Setting Disable Null 900Hz 1000Hz 1100Hz 1200Hz 1300Hz 1400Hz 1500Hz 2500Hz 4000Hz 5000Hz 6000Hz 10KHz 15KHz 20KHz 25KHz Null Pan/Tilt Reset Effect Reset Null Reset All

	210-219	Dimmer Speed Fast
	220-229	Dimmer Speed Smooth
	230-231	Gobo Short Cut: Enable
	232-233	Gobo Short Cut: Disable
	234-235	Color Short Cut: Enable
	236-237	Color Short Cut: Disable
	238-255	Null